


StereoZoom 5

0.8X thru 4.0X Variable Power Pod, Cat. No. 31-27-40

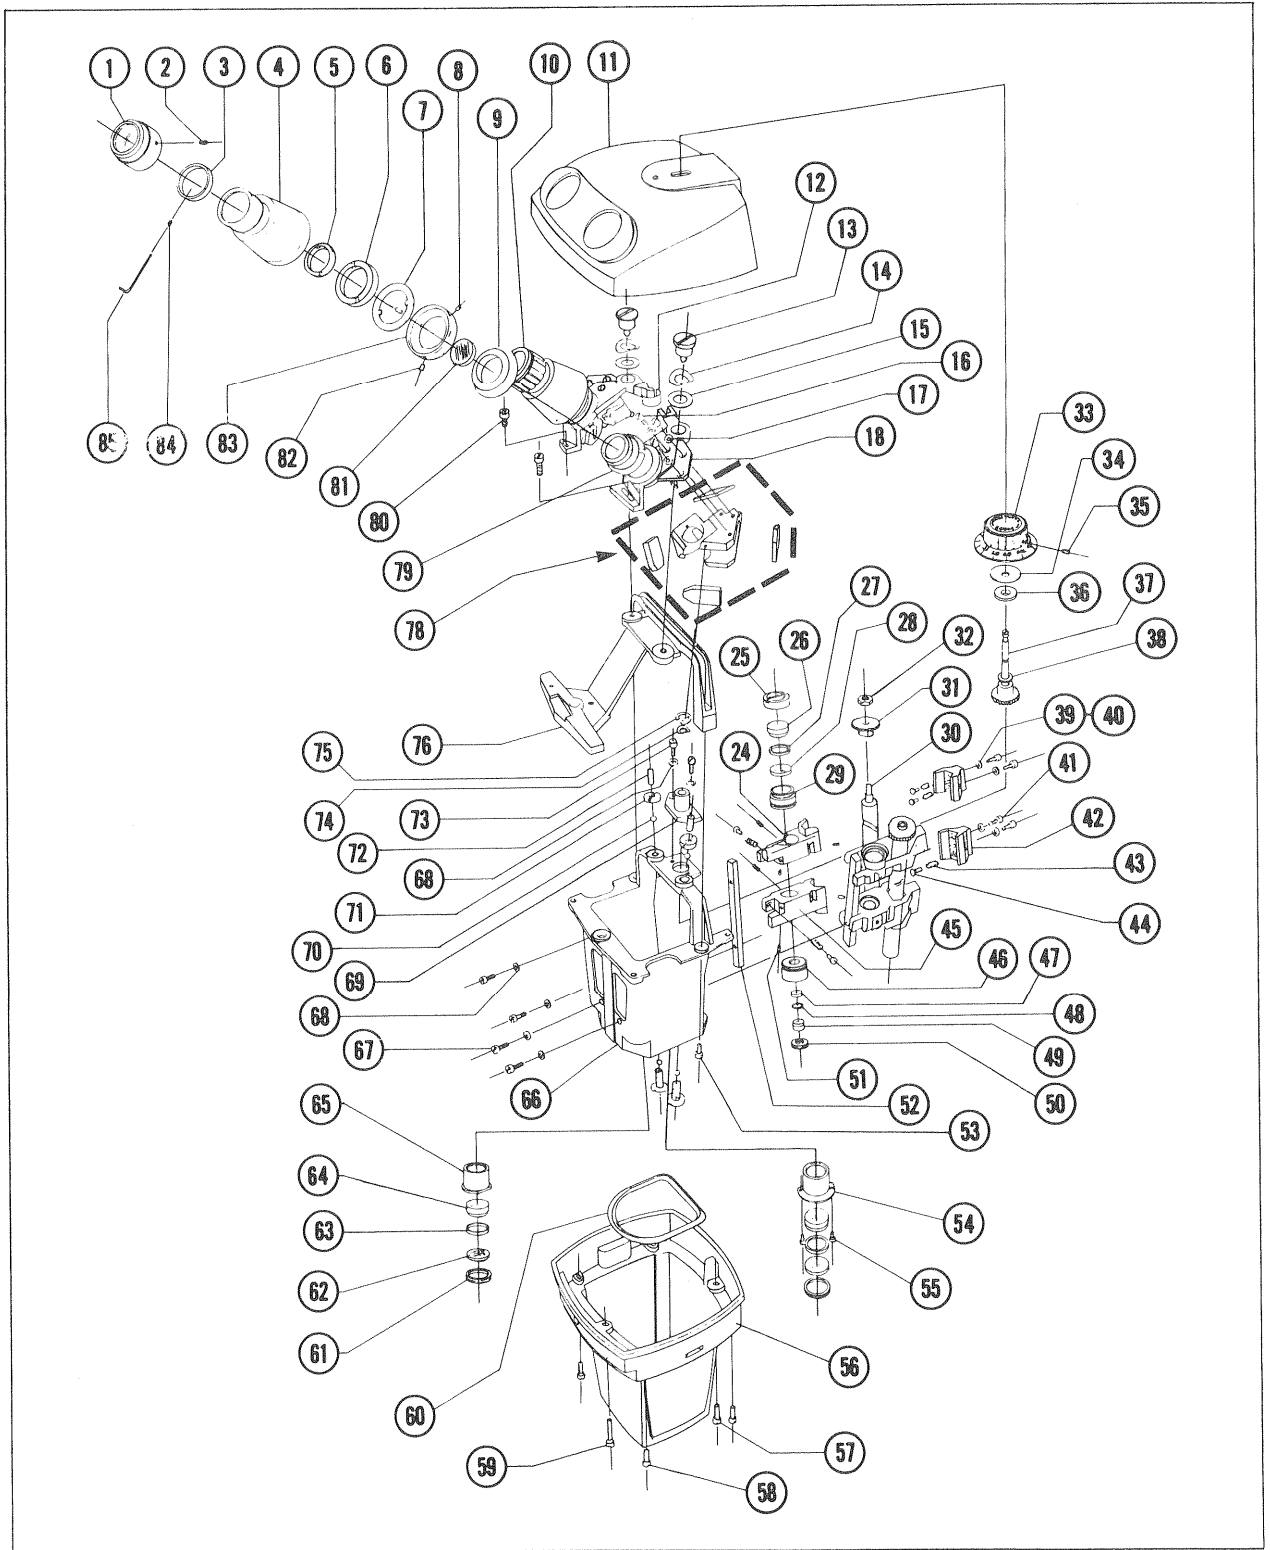

**STEREOZOOM 5
POWER POD
CAT. NO. 31-27-40**

Key	Description	Part No.	Key	Description	Part No.
1	Eyepiece Ring	312740-102	60	Cover Gasket	312694-312
2	2-64 x 1/16 lg Set Screw	312701-379ND	61	Retainer	312740-151
3	Lock Ring	312740-101	62	Lens I	312740-032
4	Adapter	312740-104	63	H-I Spacer	312740-118
5	Retaining Ring	312694-321	64	Lens GH Assy	312740-031
6	Adapter	312694-269	65	Left Objective Mount	312740-123
7	Dust Seal Washer	312694-234	66	Lead Screw Mount	312740-125
8	4-48 x 1/4 lg Set Screw	315153-120	67	6-40 x 3/8 lg Screw	312694-328
9	Dust Seal	312740-129	68	F-306 Washer	90008-369
10	Adj. Eyepiece Ring	312740-103	69	Driver Gear Support	312799-107
11	Mirror Housing	312740-160	70	Ball .1562 dia	312694-152
12	Tape	312740-132	71	Lock Nut	312694-322
13	Pivot Screw "A"	312694-144	72	Bearing Screw	312694-118
14	F-309 Washer	90008-377	73	6-32 x 3/8 lg Screw	312694-329
15	F-108 Washer	90008-281	74	F-310 Washer	90008-378
16	4-48 x 3/16 lg Screw	312694-326	75	Tru-Arc Retainer 5133-25	312695-111
17	F-120 Washer	90008-125	76	EP Mount Support	312799-102
*18	EP Mount Right (refer to key # 79)	312740-135	*78	Mirror Mount Right Assy	312694-376
	EP Mount Left (not exploded)	312799-115		Mirror Mount Left Assy	
24	Cell Mt B & Pad Assy	312694-348		(not exploded)	312694-375
25	Retainer	312740-105	*79	Tube—must be assembled with	
26	AB Lens Assy	312740-023		key # 18	312694-277
27	Spacer	312740-106	80	Pivot Screw "B" (2)	314694-145
28	Lens C	312740-024	81	Dust Cover	312694-052
29	Mount ABC	312740-107	82	4-48 x 3/16 lg Set Screw	313326-128
30	L.H. Lead Screw & Gear Assy	312740-113	83	Dust Seal Cap	312694-259
	F-303 Washer (not shown)	90008-366	84	2-64 x 1/16 lg Set Screw	312740-136
	R.H. Lead Screw & Gear Assy		85	Hex Wrench	312740-148
	(not exploded)	312740-114			
31	Gear	312799-183		*Sold in Assembled Units Only.	
32	Gear Lock Nut	312694-169			
33	Magnification Knob Assy	312740-141			
34	F-304 Washer	90008-367			
35	6-32 x 1/2 lg Set Screw	312694-236			
36	Knob Washer	312694-141			
37	Shaft & Gear Assy	312740-133			
38	F-305 Washer	90008-368			
39	F-119	90008-124			
40	Washer (not shown)	312799-235			
41	2-56 x 5/16 lg. Screw	312694-292			
42	Obj. Mt. Cover	312799-178			
43	Cover Spring	312694-372			
44	Pad "B"	312694-105			
45	Cell Mt A Pad Assy	312694-351			
46	DEF Mount	312740-109			
47	Lens D	312740-025			
48	D-E Spacer	312740-110			
49	EF Lens Assy	312740-028			
50	Retainer	312740-111			
51	2-64 x 7/32 lg Set Screw	312694-310			
52	Guide Bar	312694-106			
53	8-36 x 9/32 lg Screw	312694-327			
54	Right Objective Mount	312740-120			
55	2-56 x 3/16 lg Screw	312694-302			
56	Objective Cover	312694-370			
57	6-40 x 3/8 lg Screw (1)	312694-324			
58	6-32 x 9/32 lg Screw (4)	316012-150			
59	6-40 x 1.00 lg Screw (1)	312694-325			